



LUMINYS *High-speed Lighting™*

125K BounceLight™ & BounceHood™

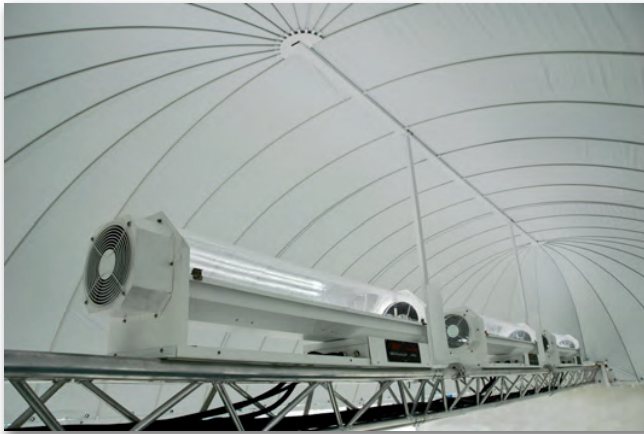

Simplify your lighting set ups by employing soft multidirectional light from our wrap around soft light hood. The Luminy's 125K BounceLight™ and BounceHood™ System is specifically designed for larger scale testing events requiring exceptional light output for high-speed photography. Luminy's flexible, multi-fixture system utilizes an Omni directional BounceHood™, our crash test award winning 30K LabLight™, and our latest state-of-the-art 125K BounceLight™ to fill a test area with soft, flicker-free light, generating an extreme depth of field and superior overall imaging for the most discriminating high-speed photography professionals.

- **Absolute flicker-free stability up to 1,000,000 frames per second means no distorted images due to arc wander**
- **Proprietary (patent pending) combination of direct and reflected light resulting in shadow free images with enhanced visibility**
- **Powerful light output, yielding up to 300,000 lux in 20' x 20' (6m x 6m) area at minimal cost**
- **Unmatched light quality with a consistent CRI of +96 and 5400°K color temperature**
- **One millisecond acceleration from low level idle to full boost, with minimal heat output, no cumbersome pneumatic controls, no shutters, and no warm-up time**
- **Nominal 8 second cool-down between full power bursts**
- **Less than 25,000 watts (120 amps of 220 VAC) of house power will produce more than 600,000 watts of light**
- **Enhanced Spectrum Long (ESL) arc's unique broad linear lamp shape provides wrap around lighting eliminating shadows, hot spots, and glare**

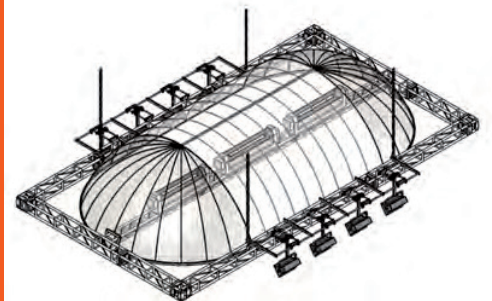

With more than 25 years of innovative, award winning lighting solutions for motion picture, television, theatre, concerts and major sporting events, Luminy's can improve your high-speed photographic results.